




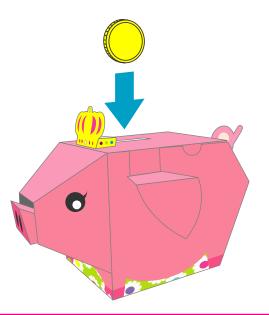

Drop in a coin and watch the money box move! It's so cute that you won't be able to stop saving!

The movements work better with heavier coins.





His nose and ears flap up and down!

Tools

Ruler, a sharp, pointed object, toothpicks,



Symbols 5

Cut out

Mountain fold ----- Cut a slit

Valley fold ---- Glue spot



Tips for a neater finish

☆ Line a ruler up with the dotted lines, and use a sharp, pointed object (eg. a dried-up pen) to score along the fold lines. Carefully make mountain and valley folds to make clean creases on each part.

☆ If using craft glue, pour some glue onto scrap paper and use a toothpick to apply it in a thin layer. This will achieve a neater finish.

Caution

This paper craft uses glue, scissors, etc, so please be sure to keep them out of reach of children while working.











