

CREATIVE PARK Pop-up Card(Snowman): Assembly Instructions

© Canon Inc. © HIROKO

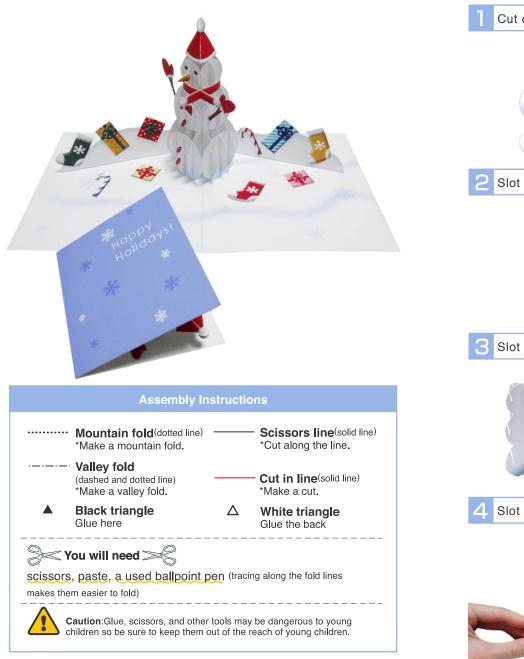

http://www.canon.com/c-park/

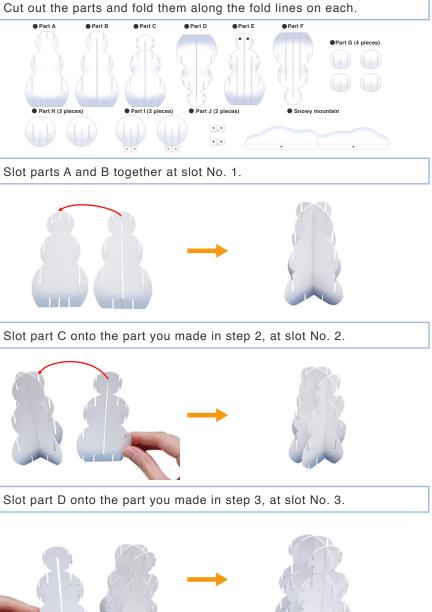






© Canon Inc. © HIROKO




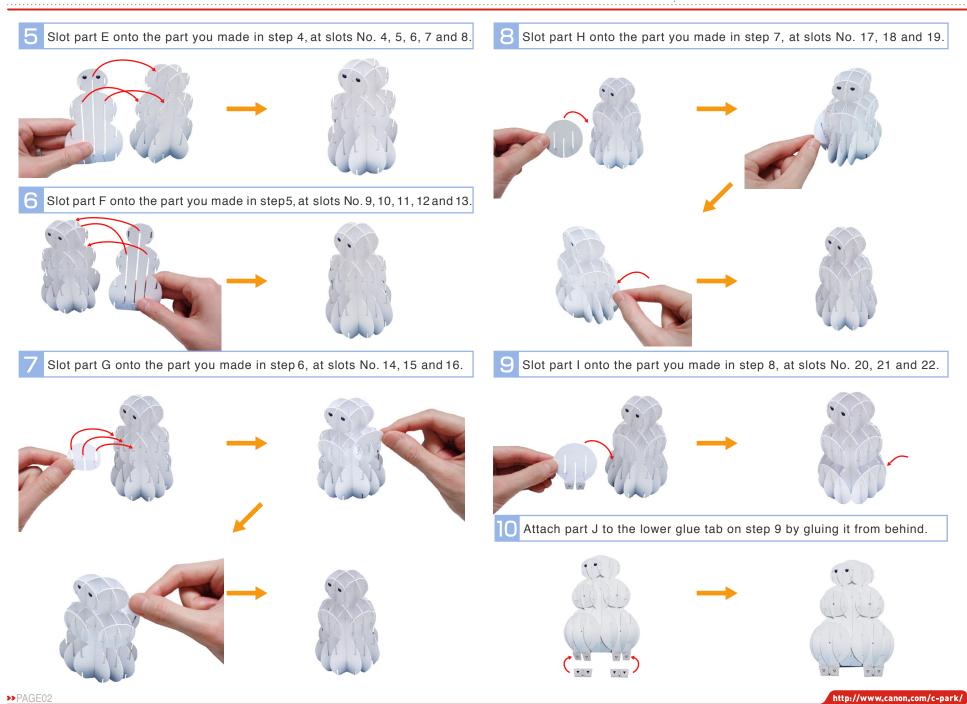

CREATIVE PARK Pop-up Card(Snowman): Assembly Instructions

© Canon Inc. © HIROKO



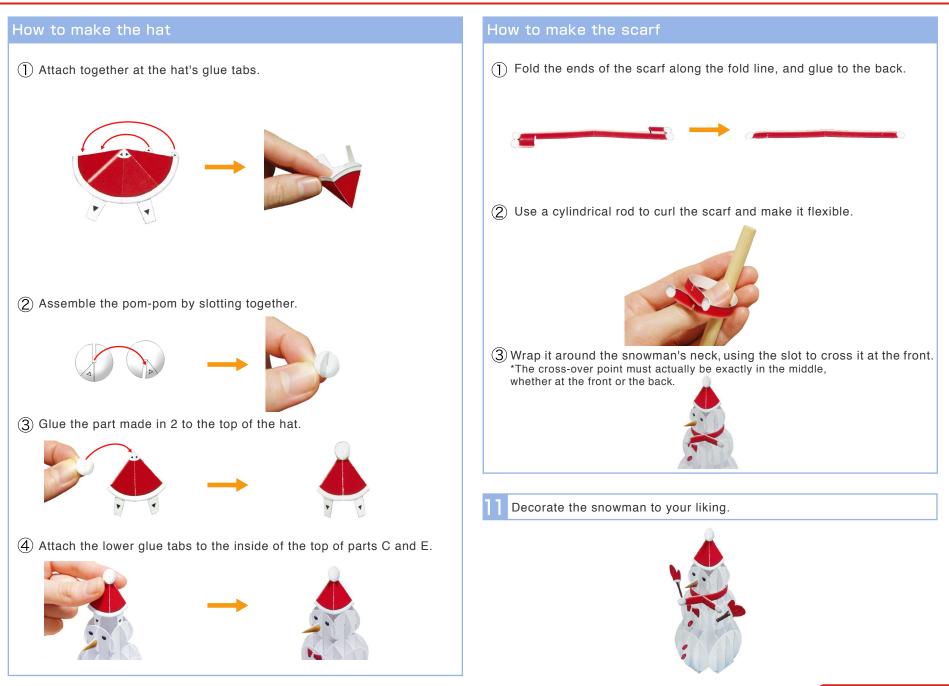


Canon

2 Attach the base together at the glue tab.

5 Add decorations to the card as you wish.

3 Insert the snowman's lower glue tabs into the slot and glue them to the underside of the base paper.

6 Stick on a colored paper cover onto half of the rear side of the base paper. Be careful to stick in on in the right direction.

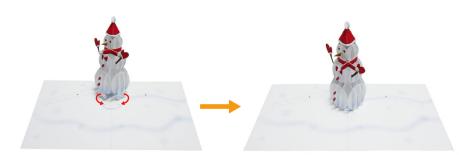

4 Glue the snowy mountain to the glue spot on the base paper.



7 16 is the completed card when the cover is stuck on to the other half side.

