CREATIVE PARK Chinese Fan<Assembly Instructions>







You will need

Scissors, glue, ruler, dried-up ballpoint pen (Begin by placing the ruler against the fold lines and drawing the empty ballpoint pen over them so that it is easy to make clean folds.)

1:			لہ	:	
	nes	an	u	IC.C)	115


Scissors line —	——— Cut in line —	Mountain fold	Valley fold
Glue tab ●	Reverse glue tab •	Cut out 🔀	

Caution

Glue, scissors and other tools and materials may be harmful to children. Please keep your work out of the reach of children.

Make the fan face

Glue A1 and A2 together.

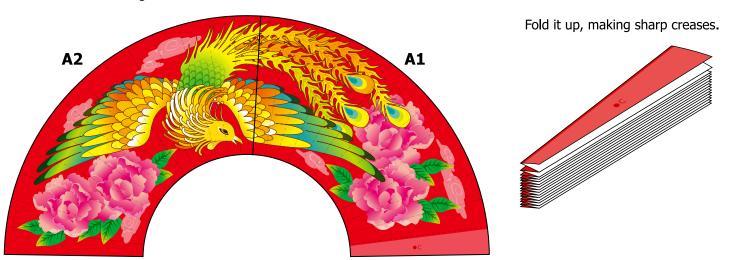

>>PAGE01


http://www.canon.com/c-park



Make the spokes


Make creases to B, and cut out the hole along the partial cut line.

Attach together (1) and then (2), and cut out.

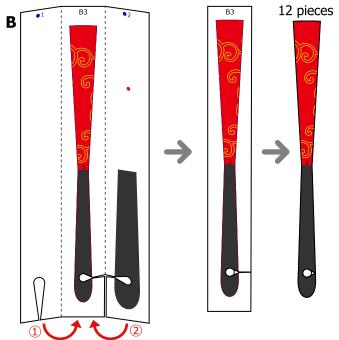


Make creases to C, and cut out the hole along the partial cut line.

Attach together (1), (2) and then (3), and cut out.

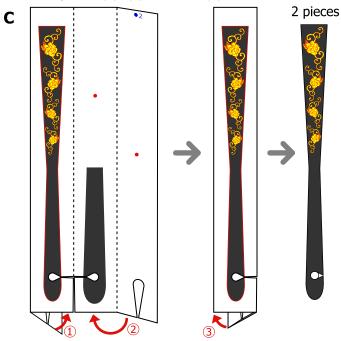

3 Attach the spokes to the fan face

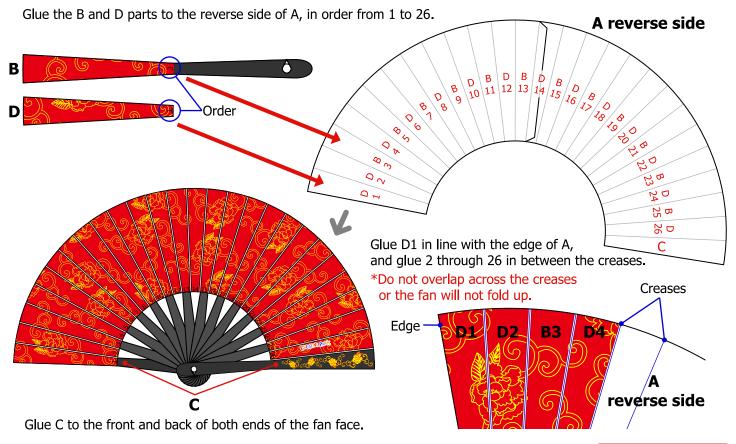




CREATIVE PARK Chinese Fan<Assembly Instructions>

© Canon Inc. © Avako Kishi





Make the axis and tassel

 
Cut the slots on the bottom side of E only. Roll up tightly beginning from the end marked "start rolling here" and glue.




Attach the three F parts together.

 

 


 

 Fold up the "bottom glue tabs" on E, insert them through the hole in F and glue them down.




 Fold H in half and attach it together, and cut it out.



Fold I in half and attach it together, and cut it out.



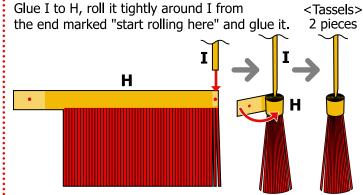

Secure the spokes and complete your fan

